

STIHL - 41471822803 - Boton accionamiento starter desbrozadora STIHL

FS240C, FS240RC, FS260, FS260C, FS261C, FS360C, FS361C, FS410C, FS411C, FS460C, FS461C, FR410C, FR460TC

Recambio original para las siguientes máquinas STIHL:

FS240C-E | FS240RC-E | FS260 | FS260C-E | FS261C-E | FS261.0C-E | FS360C-E-4147 | FS410C-E | FS360C-EM-4147 | FS410C-EM | FS361C-EM | FS361.0C-EM | FS411C-EM | FS411.0C-EM | FS460C-EM | FS461C-EM | FS461.0C-EM | FR410C-E | FR460TC-EFM | FR460TC-EM

Tipo de máquina: Desbrozadora

Referencias OEM STIHL: 41471822803, 4147 182 2803, 4147-182-2803

Denominaciones STIHL: Palanca, Botón giratorio

Modelo de STIHL: FS 240 C-E, FS 240 RC-E, FS 260, FS 260 C-E, FS 261 C-E, FS 261.0 C-E, FS 360 C-E - 4147, FS 410 C-E, FS 360 C-EM - 4147, FS 410 C-EM, FS 361 C-EM, FS 361.0 C-EM, FS 411 C-EM, FS 411.0 C-EM, FS 460 C-EM, FS 461 C-EM, FS 461.0 C-EM, FR 410 C-E, FR 460 TC-EFM, FR 460 TC-EM

Tipo de recambio: Original OEM

Fabricante: STIHL





